Home Decorators

Collection

BF-22842 AMANDA COLLECTION WALL CABINET W/TOWEL BAR

ASSEMBLY INSTRUCTIONS

Made In China

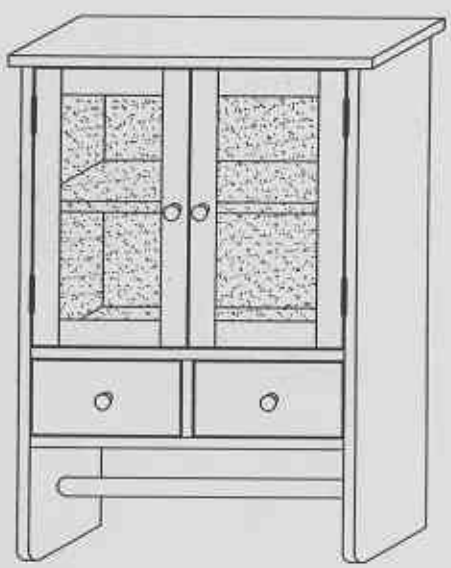

Thank you purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, Compare with parts list to be sure all part are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department. For efficient and speedy service please indicate the model number and code letter of part(s) need

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C 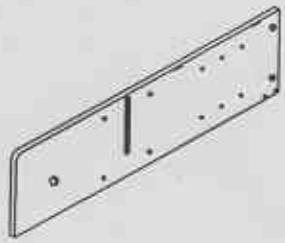 LEFT SIDE PANEL-1PC
D 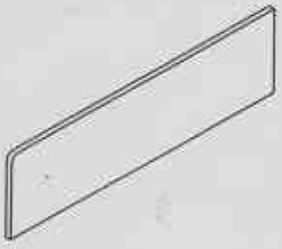 RIGHT SIDE PANEL-1PC	E  BACK PANEL-1PC	F BACK ACROSS PANEL-1PC
G  LEFT DOOR-1PC	H  RIGHT DOOR-1PC	I  SHELF-1PC
J 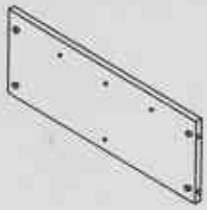 ACROSS PANEL-1PC	K STAND PANEL-1PC	L IRON WAND-1PC

M 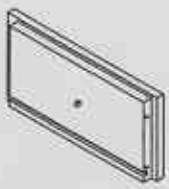 DRAWER PANEL FRONT-2PCS	N DRAWER PANEL SIDE-4PCS	O DRAWER PANEL BACK-2PCS
P DRAWER PANEL BOTTOM-2PCS	Q CAM-BOLTS-20PCS	R CAM-LOCKS-20PCS
S  HINGE-4PCS	T SCREWS-26PCS	U  LARGE MAGNET-1PC
V  FEMALE MAGNET-2PCS	W SHELF SUPPORTS-4PCS	X SCREWS-20PCS
Y DOWELS-2PCS	Z SCREWS-4PCS	A1 KNOB-4PCS
B1 HANGER-2PCS	C1 SCREWS-2PCS	D1 CAM-TOOL-1PC	E1 SCREWS-16PCS

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT.IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY,PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

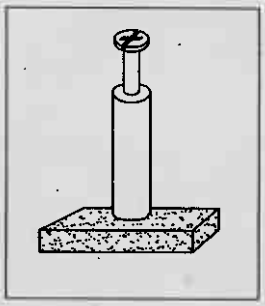

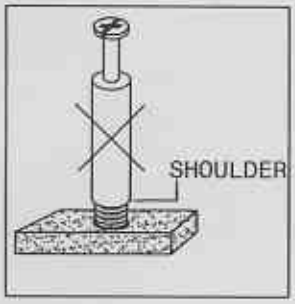

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

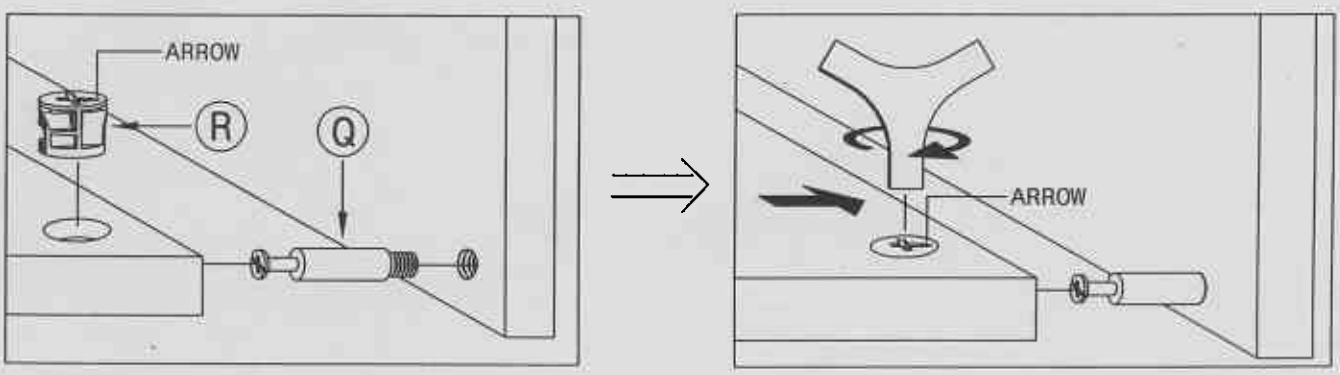

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

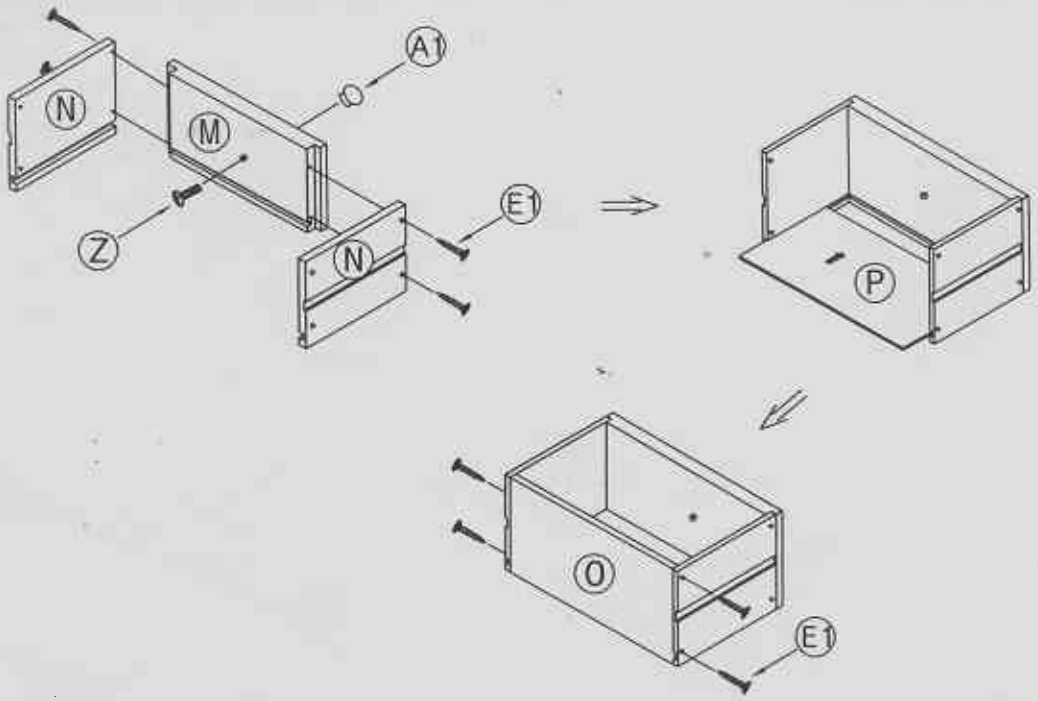

1). ASSEMBLE THE DRAWER.

- ATTACH THE KNOB(A1)TO DRAWER PANEL FRONT(M)USING SCREWS(Z).
- ATTACH DRAWER SIDE PANEL(N)TO DRAWER PANEL FRONT(M)USING SCREWS(E1).
- INSERT DRAWER BOTTOM PANEL(P)INTO SLOT IN DRAWER SIDE PANEL(N).
- ATTACH DRAWER BACK PANEL(O)TO BETTWEEN IN DRAWER SIDE PANEL(N)USING SCREWS(E1).

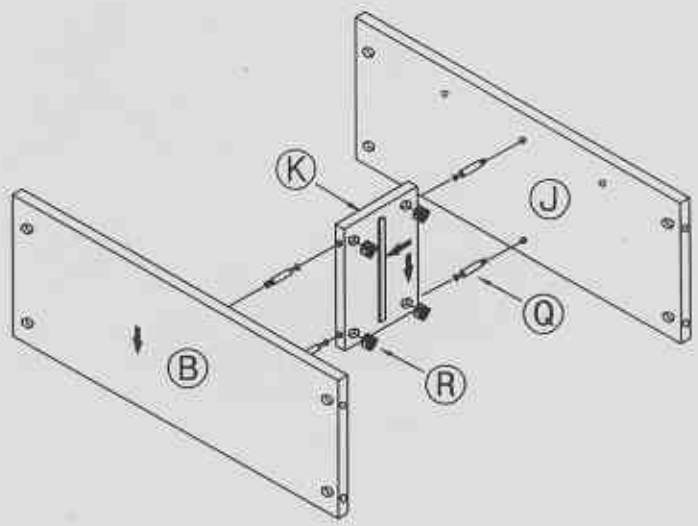

2). ASSEMBLE PANEL(B/J/K).

- ROTATE THE 4 CAM-BOLTS(Q)INTO HOLES IN BOTTOM/ACROSS PANEL(B/J).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(K)AND ATTACH USING CAM-LOCKS(R).

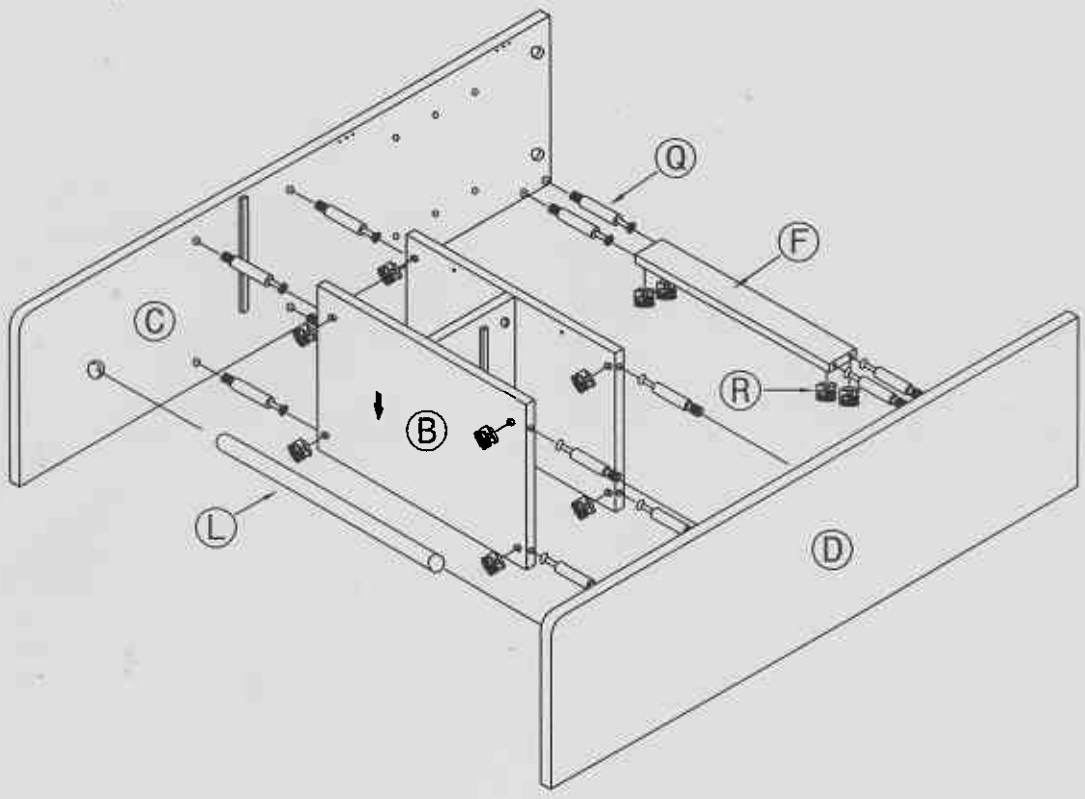

3). ASSEMBLE SIDE PANEL(C/D).

- ROTATE THE 12 CAM-BOLTS(Q)INTO HOLES IN SIDE PANEL(C/D).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(B/F/J)AND ATTACH USING CAM-LOCKS(R).
- AT THE SAME TIME,INSERT THE IRON WAND(L)INTO HOLES IN SIDE PANEL(C/D).

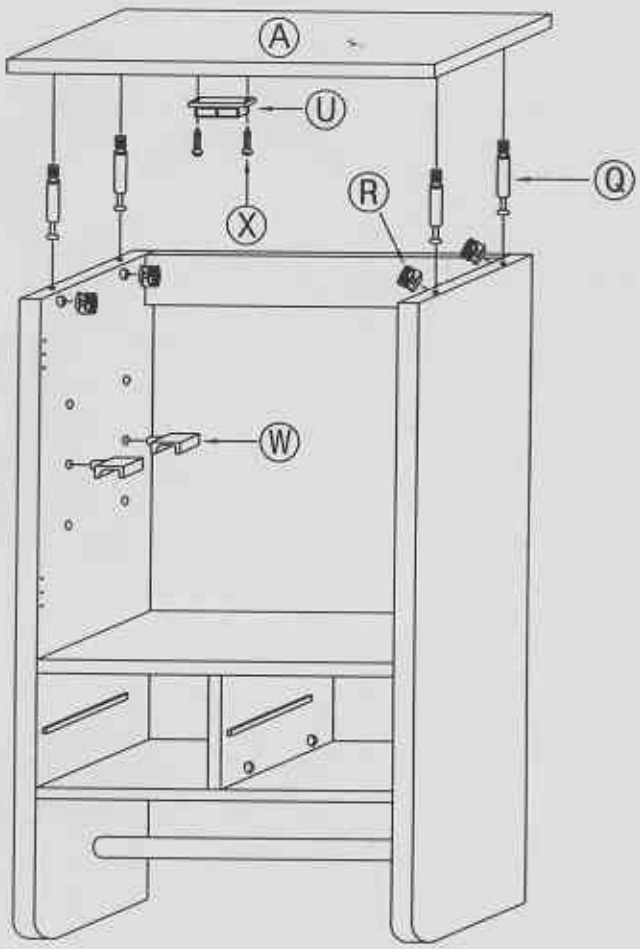

4). ASSEMBLE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(Q)INTO HOLES IN TOP PANEL(A).
- PLACE CAM-BOLTS(Q)INTO HOLES IN PANEL(C/D)AND ATTACH USING CAM-LOCKS(R).
- ATTACH LARGE MAGNET(U)TO TOP PANEL(A)USING 2 SCREWS(X).
- INSERT 4 SHELF SUPPORTS(W)INTO HOLES IN UP SIDE PANEL(C/D).

NOTE: (Attach right door(H)by the same method as left door(G) with hinge(S)and screws(T).

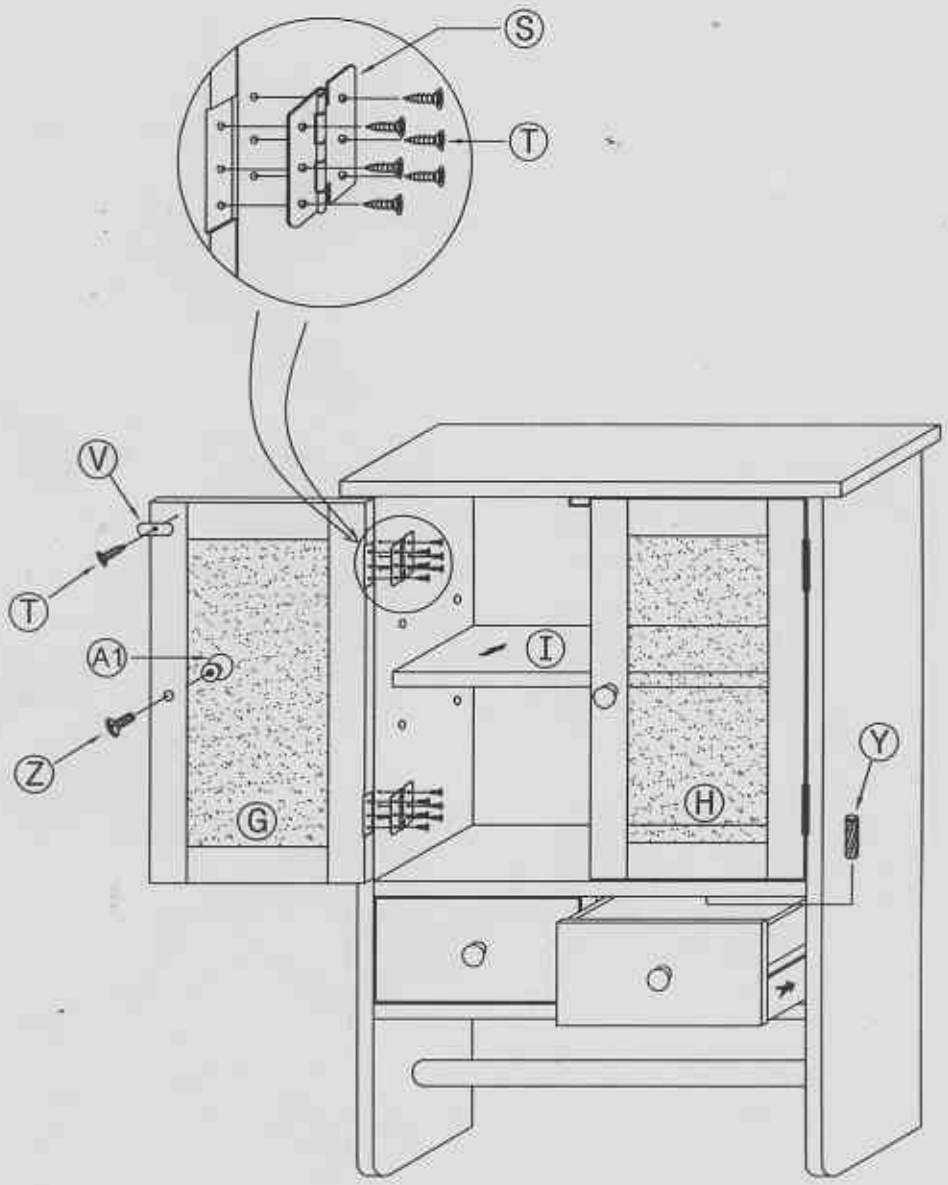

5). ASSEMBLE THE DOORS(G/H).

- ATTACH 2 HINGE(S)TO LEFT DOOR(G)AND LEFT SIDE PANEL(C)USING 12 SCREWS(T).
- ATTACH THE FEMALE MAGNETS(V)TO LEFT DOOR(G)USING SCREW(T).
- ATTACH THE KNOB(A1)TO LEFT DOOR(G)USING SCREW(Z).
- PUT SHELF(I)ONTO SHELF SUPPORT(W) .
- INSERT THE DOWELS(Y)INTO HOLES IN ACROSS PANEL(J)AND SLIDER THE DRAWERS.

Note:Before you assemble the back panel,please make sure the doors have an even gap around them.If uneven,shift the unit LEFT OR RIGHT UNTIL the doors are evenly spaced,then attach back panel.

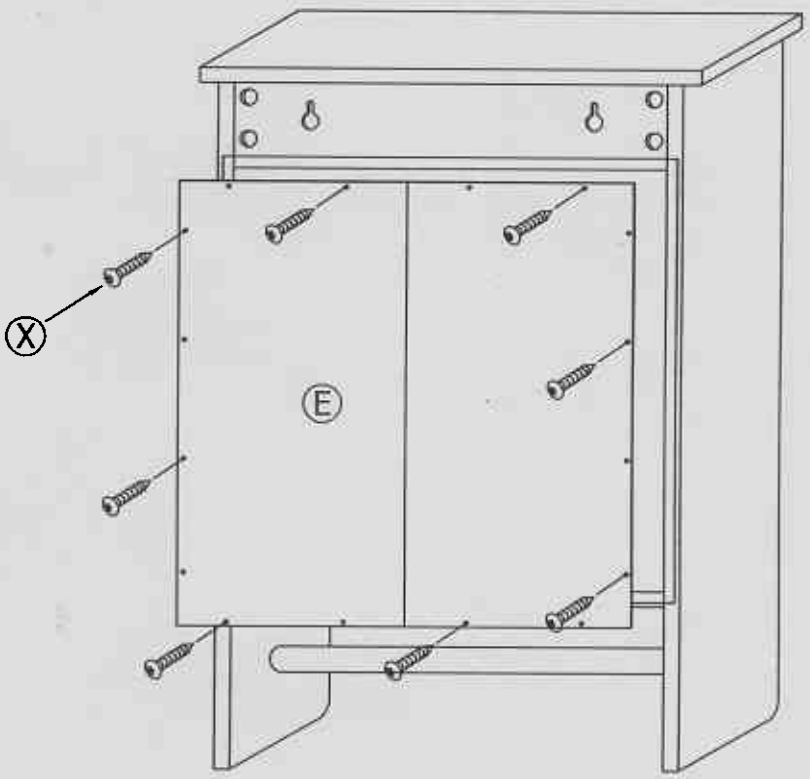

6). ASSEMBLE THE BACK PANEL(E).

● ATTACH THE BACK PANEL(E)TO ACROSS/BOTTOM/SIDE PANEL USING SCREWS(X).

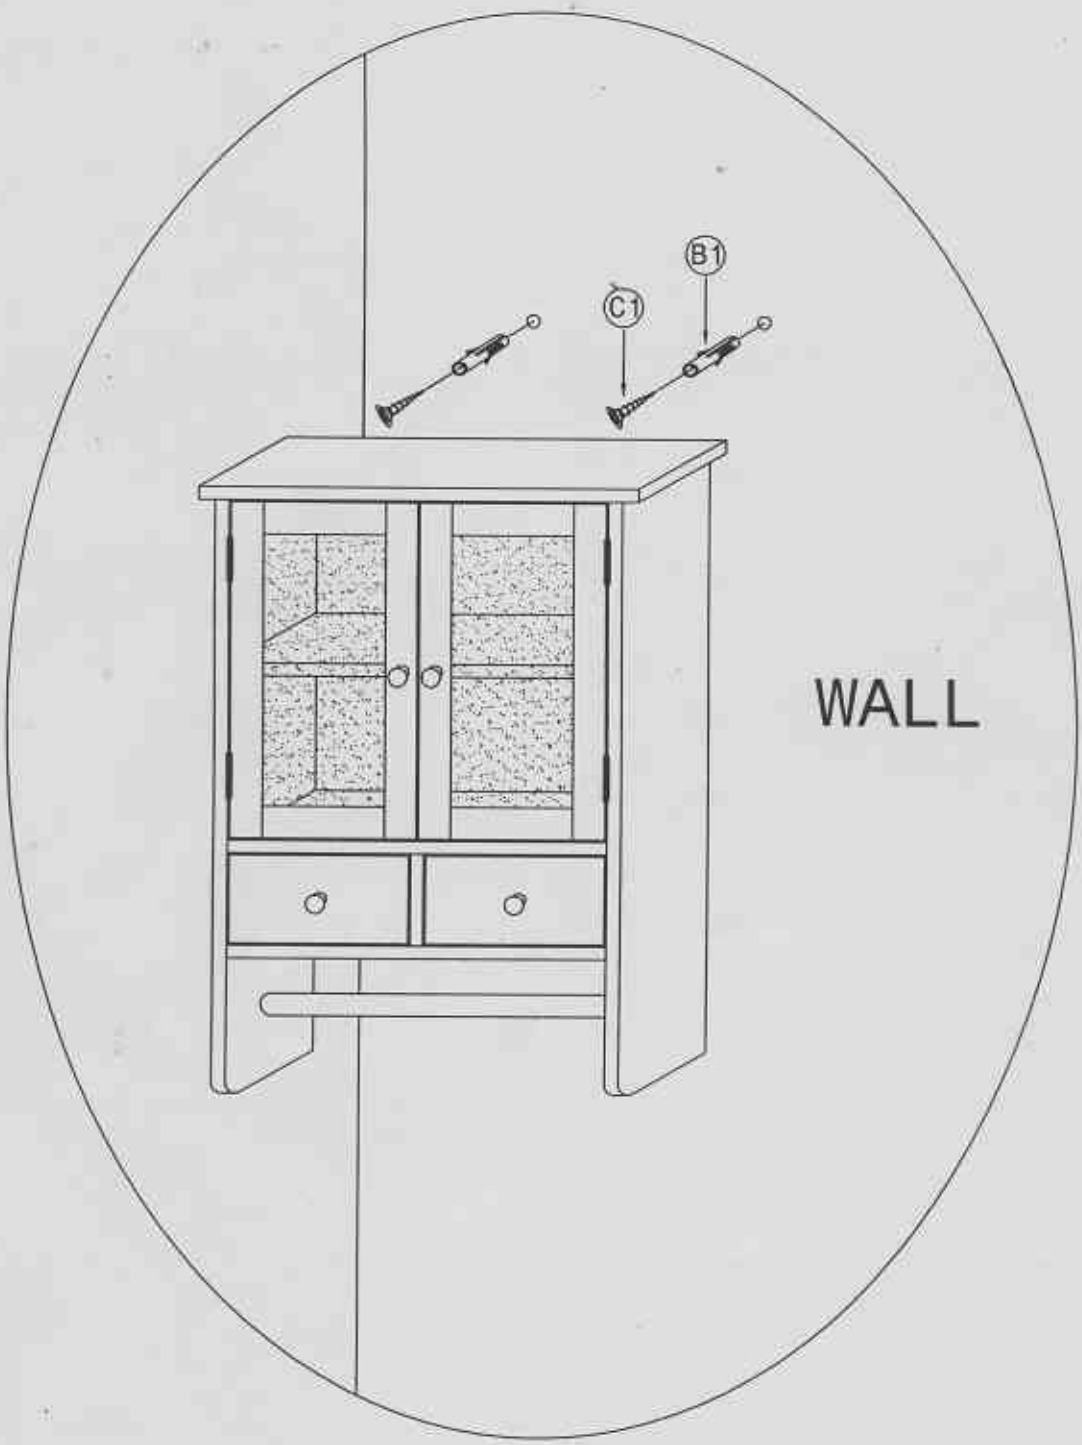

7). ASSEMBLE HANGER(B1).

- DRILL TWO SMALL HOLES INTO THE WALL EQUAL DISTANCE AS THE HOLES ON THE BACK PANEL.
- INSERT 2 HANGER(B1)INTO THE WALL HOLES AND ROTATE THE 2 SCREWS(C1)INTO HANGER(B1).
- FINALLY,HANG THE CABINET ONTO THE SCREWS(C1).